



DR-U Uturn assembly

1

Put the wire through
eyestay and tongue guides




2

Pull the wire through
correct channels in
the housing.



3

Cut wires to correct length
- between 10 and 12 cm

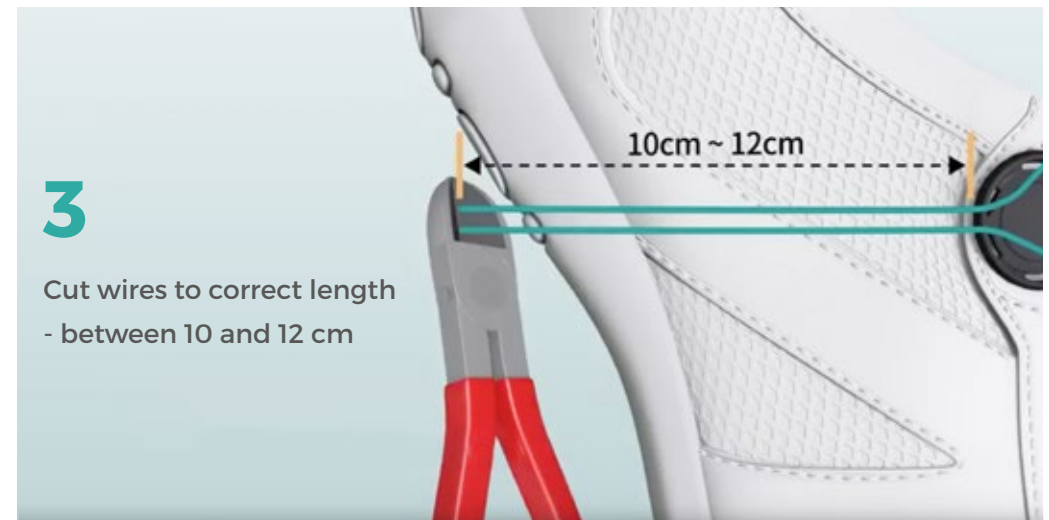

4

System parts



5

Thread the wire ends through the dial, depending on its position on the shoe.



6

Wires must go parallel through the dial for the central (tongue) position


7

Wires must be crossed for side (eyestay) position before being threaded through the dial



8

Follow the numbers on the reel in sequence, following the direction of the arrows. Push the wire through channel 1,

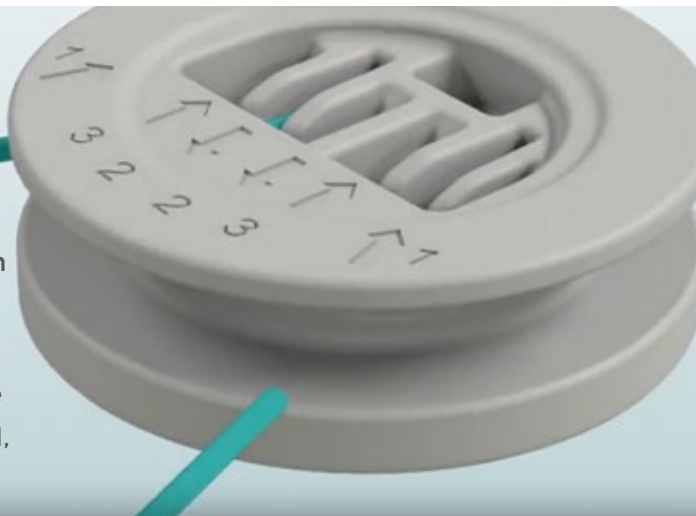

9

Loop it round and down through channel 2 then back up through channel 3 which is a dead end. Push the wire into place in channel 3.





14

Keep the reel with embossed numbers upwards. Thread the wires through the slots in the dial. Push the reel back into dial.



15

Lock the reel in position by putting the cover on, pressing it into correct slots. CLICK.



16

Make sure that the word "TOP" is on the top of the assembly so the cover is not upside down.

17

Line up the assembled housing lugs with the slots on the base plate, in order to push the system in place correctly



18



19

Press it into position. If system is placed correctly you hear "CLICK"



20



21

Double check that the dial tightens the lace.

